
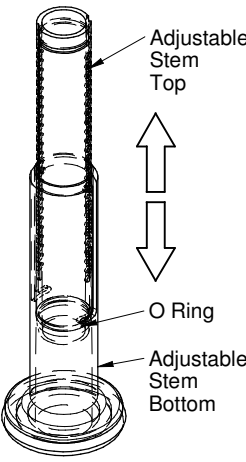
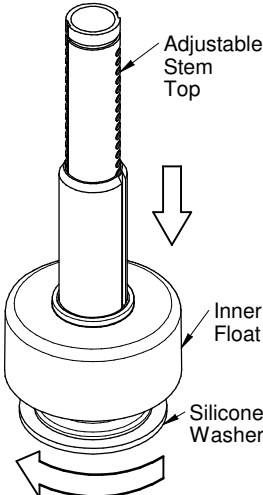
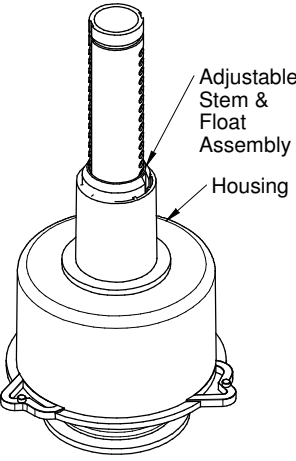
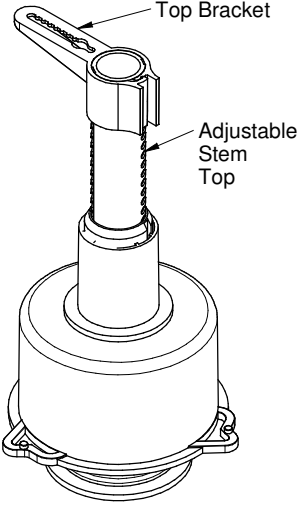
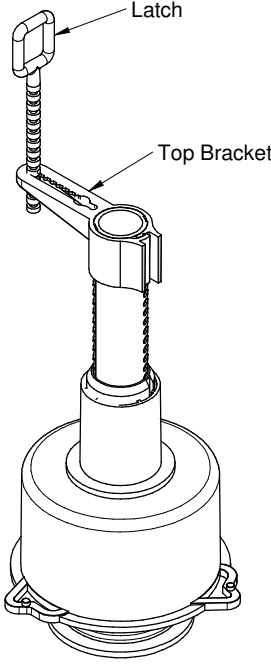
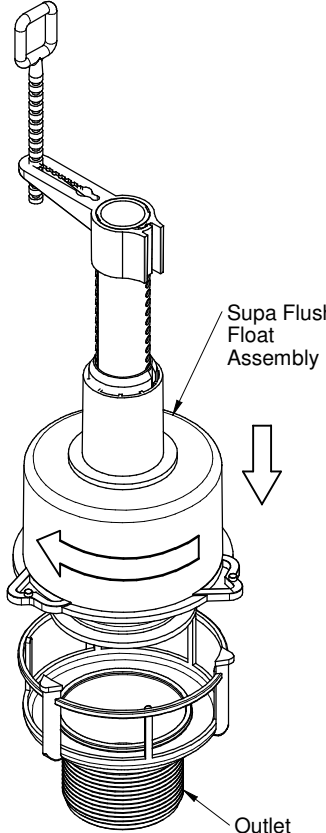


ASSEMBLY INSTRUCTIONS FOR SUPA FLUSH VALVE

<p>1</p>  <p>Adjustable Stem Top O Ring Adjustable Stem Bottom</p> <p>Fit O Ring onto adjustable stem top, spray tip of adjustable stem top around the O Ring area with silicone spray. Insert adjustable stem top into adjustable stem bottom.</p>	<p>2</p>  <p>Adjustable Stem Top Inner Float Silicone Washer</p> <p>Fit inner float onto adjustable stem bottom. IMPORTANT: Ensure that the float is secured into the key lock position. Fit the silicone washer onto the adjustable stem bottom.</p>	<p>3</p>  <p>Adjustable Stem & Float Assembly Housing</p> <p>Slide housing over adjustable stem & float assembly.</p>	<p>4</p>  <p>Top Bracket Adjustable Stem Top</p> <p>Clip top bracket onto adjustable stem top.</p>
<p>5</p>  <p>Latch Top Bracket</p> <p>Fit latch onto top bracket.</p>	<p>6</p>  <p>Supa Flush Float Assembly Outlet</p> <p>Fit Supa Flush float assembly onto outlet.</p>	<p>7</p>  <p>Washer Backnut Capnut</p> <p>Fit washer backnut and capnut.</p>	

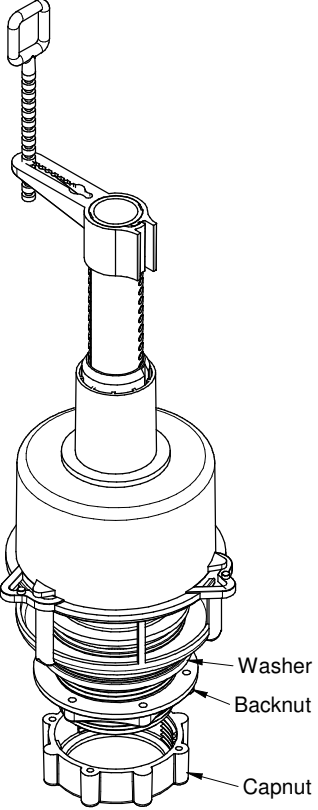

Dutton Plastics
ENGINEERING

A Division of the Zimco Group (Pty) Ltd.

Reg. No:1947/025245/07

14 Dienst Street ,Alrode Ext 2, Alberton
PO Box 145092, Bracken Gardens ,1452
Republic of South Africa

Head Office:

Tel: 011-617-5000

Fax: 011-864-2677

Branches:

Cape Town: 021-552-4460

Durban: 031-705-2533

Port Elizabeth: 041-373-0462

Website: www.duttonplastics.com